



MODEL 209

- 1 Trim
2 Edge guard

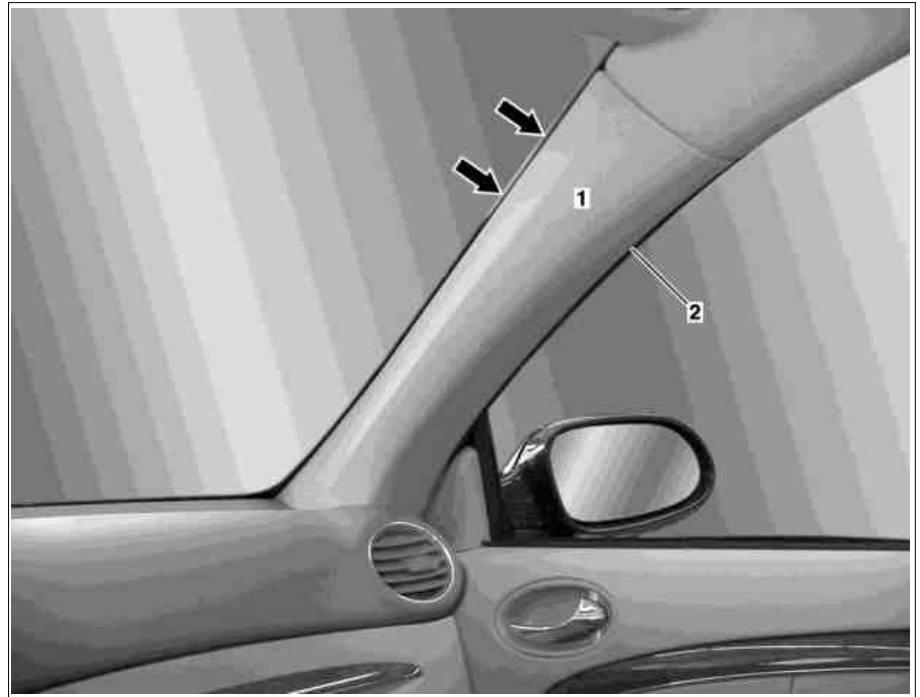

P68.30-2483-06

☒ ☒	Remove/install		
ⓘ	Note on function reliability of windowbag		AH91.60-P-0693-01A
1.1	Remove paneling from windshield at top	Model 209.4	AR68.30-P-4250QA
2	Pry off paneling (1)	ⓘ Bring mounting wedge near the clamps (arrows) and pry off paneling (1). ☒	*110589035900
3	Remove trim panel (1)	ⓘ Remove paneling (1) toward top out of the instrument panel guide.	
4	Install in the reverse order		
5	Align edge guard (2) after installation in area of paneling (1)		

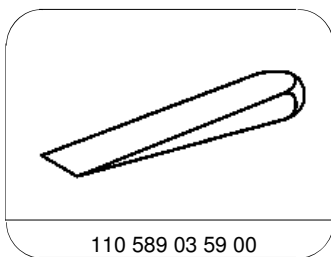

110 589 03 59 00

Wedge tool