

MODEL 203

with CODE (326) Telephone holder in front armrest

with CODE (386) Preinstallation for telephone "Handy", UPCI system

MODEL 209

with CODE (326) Telephone holder in front armrest


with CODE (386) Preinstallation for telephone "Handy", UPCI system

except CODE (P98) Black Series

MODEL 209

with CODE (494) USA version

except CODE (P98) Black Series

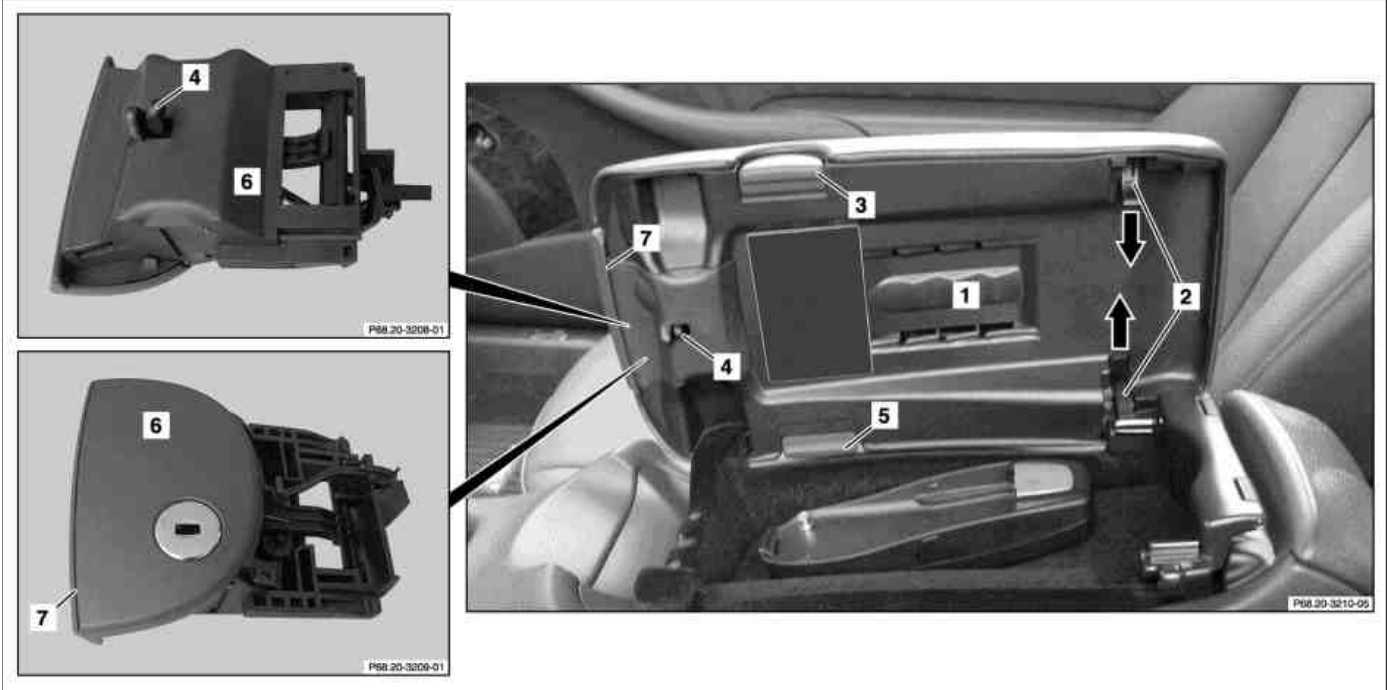

P68.20-3211-09

Shown on model 209

- 1 Cover
2 Lever

- 3 Pushbutton
4 Pins
5 Pushbutton

- 6 Catch
7 Pushbutton

	Remove		
1	Open cover (1)		For this purpose, actuate button (3).
2	Press both levers (2) in direction of arrow		Keep both levers (2) pressed.
3	Slightly swivel lid (1)		Until button (3) extends again.
4	Remove lock (6)		Press onto lock (6) with suitable tool until it is unlocked and remove from cover toward front of vehicle. Do not damage component and area around to ensure proper function
	Install		
5	Press pin (4) into lock (6)		Keep pin (4) pressed.
6	Install lock (6) in cover (1)		Until lock (6) arrests audibly
7	Press both levers (2) in direction of arrow		Hold down both levers (2) and pin (4)
8	Actuate button (3)		Release both levers (2) and pin (4)
9	Release button (3).		
10	Close lid (1)		Until button (3) extends again.
	Check		
11	Check lid (1) for proper function		For purpose press button (3, 5) or button (7) to open cover (1). The opening direction is specified by buttons (3, 5, 7).
12	Close lid (1)		