

MODEL 203

with CODE (326) Telephone holder in front armrest

with CODE (386) Preinstallation for telephone "Handy", UPCI system

MODEL 209

with CODE (326) Telephone holder in front armrest


with CODE (386) Preinstallation for telephone "Handy", UPCI system

except CODE (P98) Black Series


MODEL 209

with CODE (494) USA version


except CODE (P98) Black Series

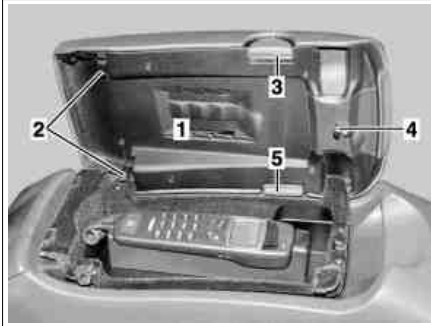

P68.20-2732-01

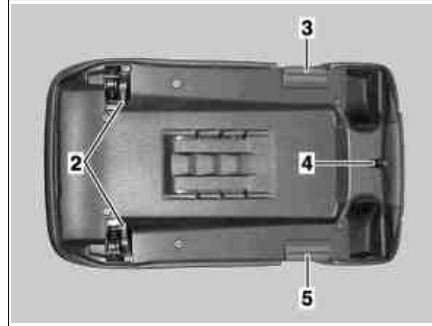

P68.20-2733-01

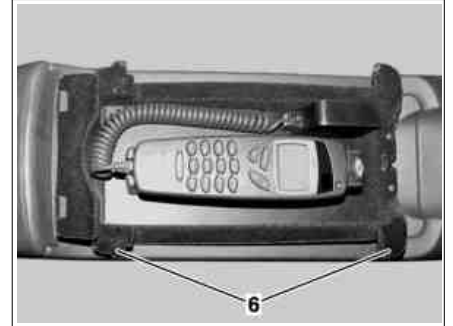

P68.20-2734-01

Shown on model 209

1 Lid

2 Lever
3 Button
4 Pins5 Button
6 Bearing eyes

	Remove		
1	Open cover (1)	Actuate button (3).	
2	Press both levers (2) down	Keep both levers (2) pressed.	
3	Slightly swivel lid (1)	Until button (3) extends again.	
4	Press in pin (4)		
5	Actuate button (5)		
6	Front lid (1)		
	Install		
7	Press both levers (2) down	Keep both levers (2) pressed.	
8	Press in pin (4)	Keep pin (4) pressed.	
9	Actuate button (3)	Release both levers (2) and pin (4)	
10	Release button (3).		
11	Install lid (1) in bearing eyes (6)		
12	Press both levers (2) down		
13	Slightly swivel lid (1)	Until button (3) extends again.	
14	Press both levers (2) further down	Keep both levers (2) pressed.	
15	Press in pin (4)	Keep pin (4) pressed.	
16	Actuate button (5)	Keep button (5) pressed.	
17	Release both levers (2) and pin (4)		
18	Release button (5).		
19	Close lid (1)	until button (5) extends again.	
	Check		
20	Check lid (1) for proper function		