



MODEL 209.3

- 1 SRS airbag cover
- 2 Screw
- 3 Trim
- 4 Belt
- 5 Slot
- 6 Edge guard

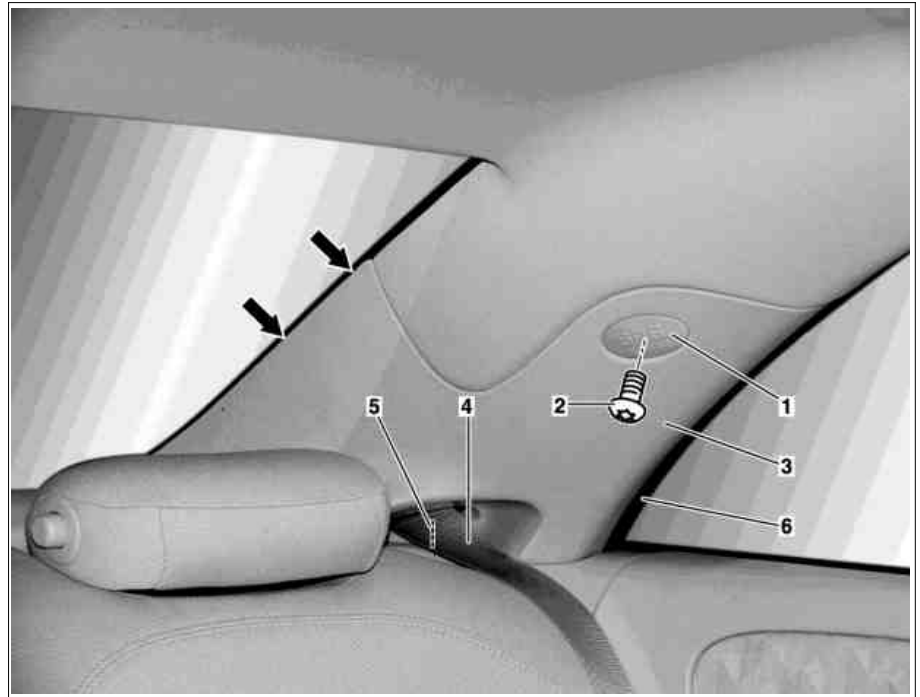

P68.30-2482-06

☒ ☒	Remove/install		
ⓘ	Note on function reliability of windowbag		AH91.60-P-0693-01A
1	Unclip SRS airbag covering (1)		
2	Remove bolt (2)		
3	Pry off paneling (3)	ⓘ Bring assembly wedge near the clamps (arrows) and pry off paneling (3). ☒	*110589035900
4	Remove paneling (3)	ⓘ Remove paneling (3) from rear shelf toward front.	
5	Guide belt strap (4) through slot (5)	Vehicles without code P98 Black Series ⓘ Installation: Check belt strap (4) for proper function.	
6	Install in the reverse order		
7	Align edge guard (6) after installation in area of paneling (3)		

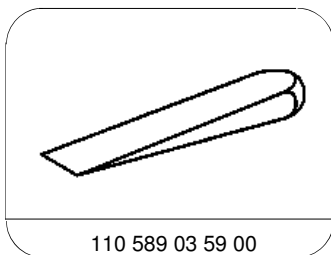

110 589 03 59 00

Mounting wedge