

P88.10-2061-09

- 1 Front fender
- 2 Cover
- 3 Longitudinal member paneling


- 4 Nuts
- 5 Bolts
- 8 Plastic cover

- 9 Seal
- 11 Arresting lug

- 6 Bolt
- 7 Retaining rail
- 10 Bolts




P88.10-2039-01

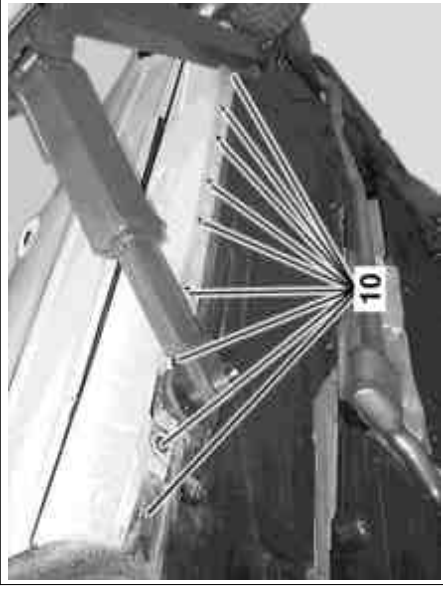


P88.30-2090-01


Vehicles with code P98 Black Series

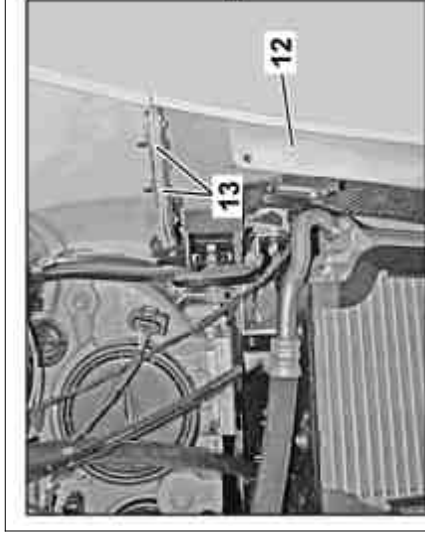



- 12 Bumper
- 13 Bolts

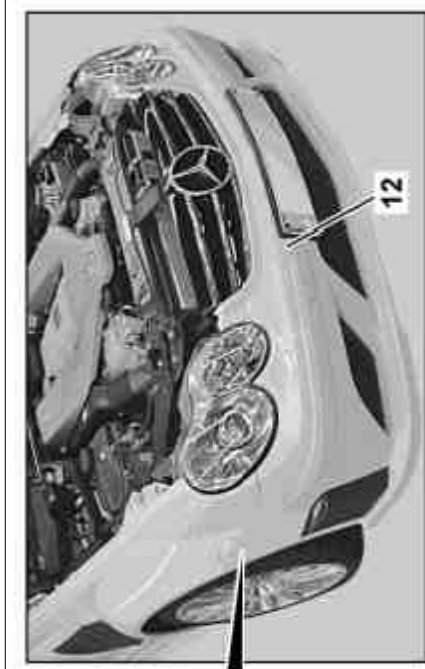


P88.10-2205-04




	Remove/install		
<p>⚠ Danger!</p> <p>1</p>	<p>Risk of injury caused by fingers being pinched or crushed when removing, installing or aligning hoods, doors, trunk lids, tailgates or sliding roof</p> <p>Open engine hood and move to vertical position</p>	<p>Keep body parts and limbs well clear of moving parts.</p>	<p>AS00.00-Z-0011-01A</p> <p>AR88.40-P-1000Q</p>

⚠ Danger!	Risk of death caused by vehicle slipping or toppling off of the vehicle lift	Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.	AS00.00-Z-0010-01A
2	Install adapters on vehicle lift support points		*203589023100
3	Remove bolts (5)		
4	Remove interior trim from entrance		*115589035900
5	Remove cover rail from entrance		*115589035900
6	Remove front fender liner		AR88.10-P-1300P
7.1	Remove bolts (13) from bumper (12)	Vehicles with code P98 Black Series	
7.2	Remove bolt (6)	Vehicles without code P98 Black Series	
8	Pivot retaining rail (7) toward inside	Vehicles without code P98 Black Series i Installation: Ensure that the pin on the retaining rail (7) is seated correctly.	
9	Pull retaining rail (7) toward rear and remove	Vehicles without code P98 Black Series	
10	Remove bolts (10) on underfloor paneling along longitudinal member paneling (3)		
11	Remove bolts (10) from expansion clips on longitudinal member paneling (3)	i Front six bolts (10).	
12	Pull out expansion clips		
13	Unclip longitudinal member panel (3)	⚠ Do not damage longitudinal member panel (3). i Unclip longitudinal member panel (3) in area of front fender (1) until nuts (4) are accessible. 	*115589035900
14	Remove nuts (4) on front fender (1)		
15	Remove front fender (1)	i Disconnect front fender (1) from bumper by slightly pulling in area of arresting lug (11).	
16	Install in the reverse order Replace front fender		
17	Unclip cover (2)		
18	Remove plastic cover (8)	Vehicles without code P98 Black Series	
19	Glue seal (9) to new part	Vehicles without code P98 Black Series	*BR00.45-Z-1003-02A

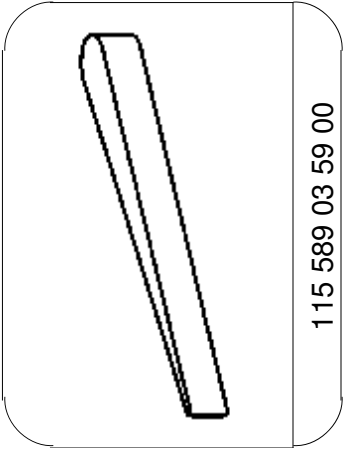

Long wedge

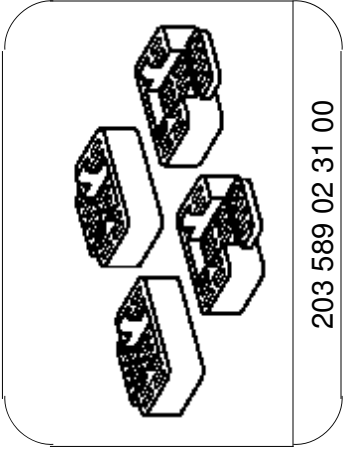

Adapter kit

Repair materials

Number	Designation	Order number
BR00.45-Z-1003-02A	Adhesive/Dekalin 3649	A 000 989 82 71