




MODEL 209 except CODE (P98) Black Series

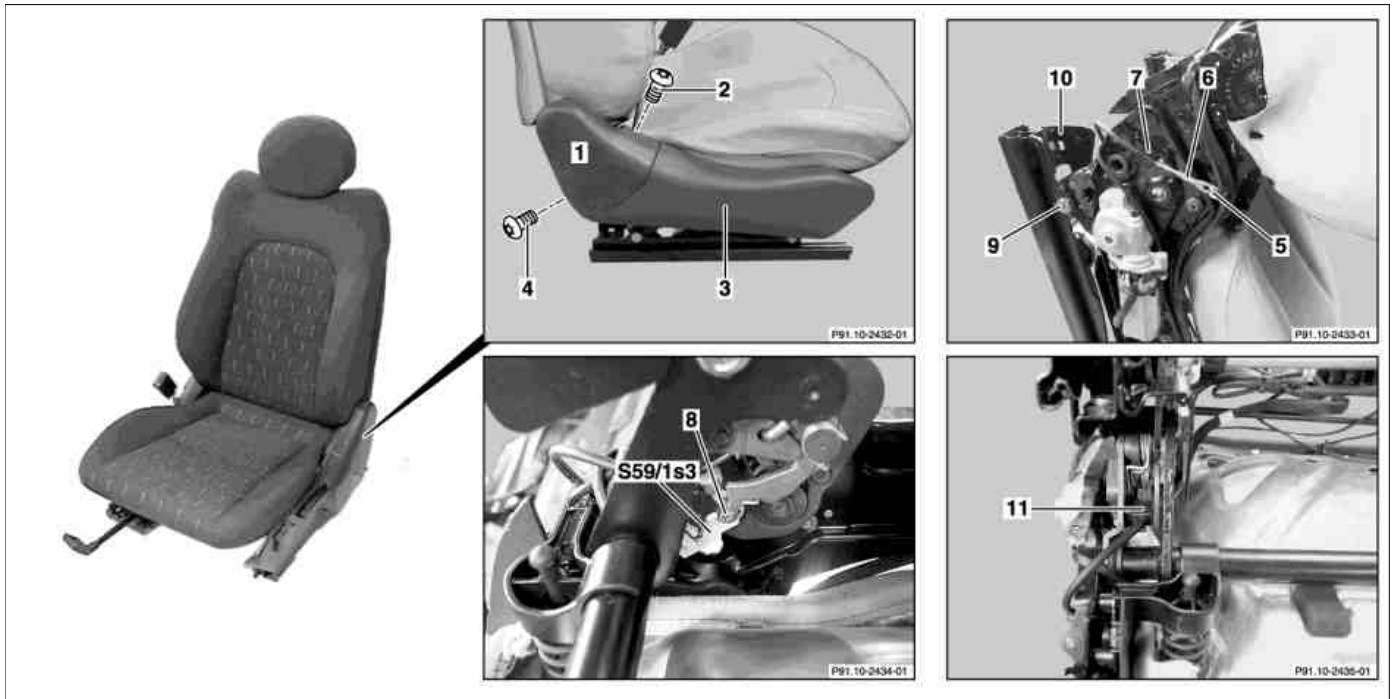

P91.10-2431-09

- |   |               |   |                    |         |                                       |
|---|---------------|---|--------------------|---------|---------------------------------------|
| 1 | Side paneling | 5 | Bowden cable fuse  | 9       | Screw                                 |
| 2 | Bolts         | 6 | Control cable      | 10      | Seat rail                             |
| 3 | Side paneling | 7 | Bowden cable guide | 11      | Bowden cable guide                    |
| 4 | Screw         | 8 | Screw              | S59/1s3 | Easy entry and exit ON and OFF switch |

 	Remove/install		
1	Remove front seat		AR91.10-P-1000Q
2	Unscrew bolts (2) from right side paneling (1)		
3	Remove side paneling (1)		
4	Unscrew bolt (4) for side paneling (3)		
5	Remove side paneling (3)		
6	Pry off Bowden cable fuse (5)		
7	Unhinge Bowden cable (6)		
8	Unscrew bolt from Bowden cable guide (7)		
9	Remove Bowden cable guide (7)		
10	Unscrew bolt (8) from easy entry and exit ON and OFF switch (S59/1s3)		
11	Remove easy entry and exit ON and OFF switch (S59/1s3)		
12	Unscrew bolt (9) from the seat rail (10)		
13	Twist Bowden cable guide (11) to the left and remove		
14	Detach Bowden cable (6) at bottom		
15	Install in the reverse order		
16	Carry out function check		