


1 Mask off area not to be bonded using adhesive tape.

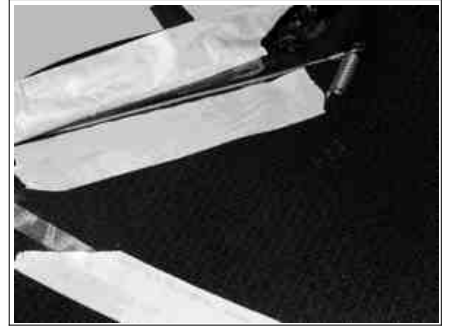


P77.31-2238-01

2 Mix adhesive.


i Adhesive (2) and hardener (3) are both included in the package. Remove plastic slider and mix components with the package closed.

3 Put adhesive on a clean underlay.

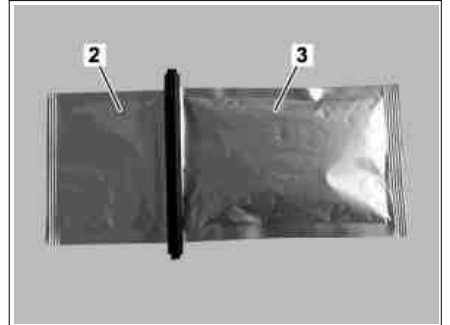

P77.31-2223-01

4 Apply adhesive with brush supplied.

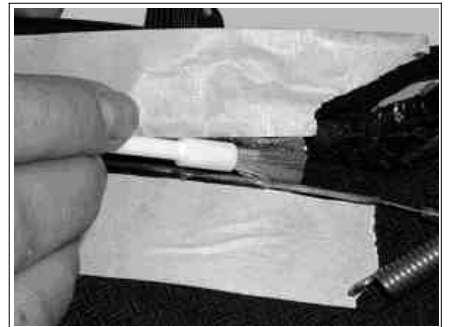

P77.31-2239-01

5 Set adhesive seam.

i Allow adhesive seam to harden for min. 5 hours. Do not apply any stress to the bond.



P77.31-2229-01