

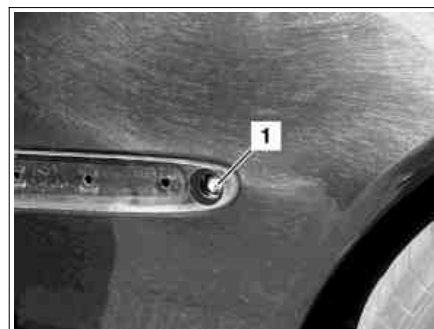


Socket wrench

- 1 Remove rub strip on rear fender.
- 2 Adjustment by means of adjustment screw (1) with socket wrench 
 The upper edge of the rear window web seal must run centrally into the roof frame seal when raising the rear side window.
- 3 Check preload.



P67.30-2100-01