


MODEL 203.0 with CODE (287) Through-loading feature

MODEL 203.2 /7

MODEL 209.3 except CODE (P98) Black Series

1 Side cushion

2 Bolt

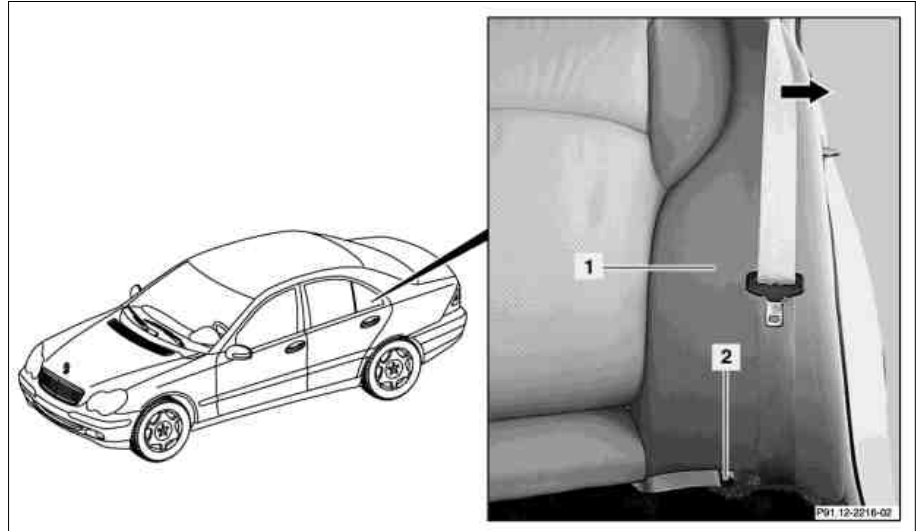

P91.12-2217-05

☒ ☒	Remove/Install		
1	Release rear seat cushion and fold forwards		
2	Unscrew bolt (2)		
3	Pull side cushion (1) at the top and remove	<p>i See arrow.</p> <p>i Installation: On models 203.0/2 , ensure that the stapling wire latches in the clip on the wheelhouse.</p>	
4	Install in the reverse order		