


MODEL 209 except CODE (P98) Black Series

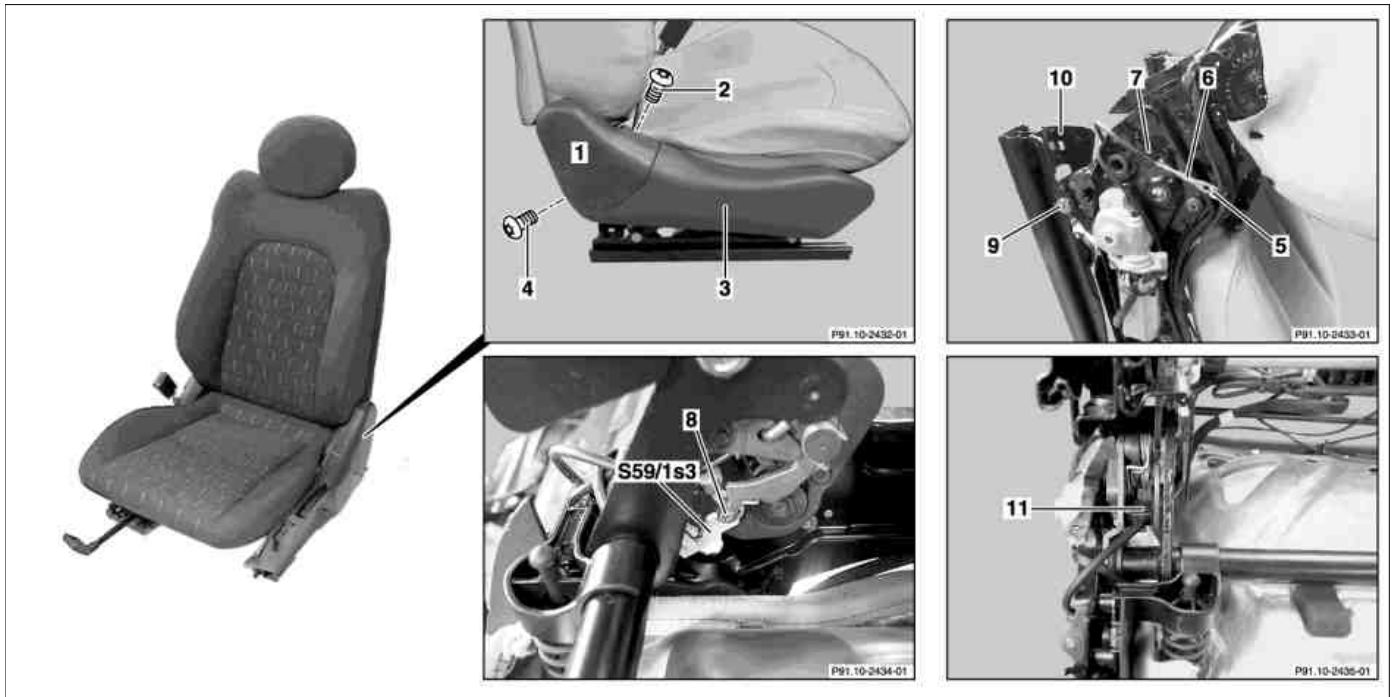



P91.10-2431-09

- 1 Side paneling  
2 Bolts  
3 Side paneling  
4 Screw

- 5 Bowden cable fuse  
6 Control cable  
7 Bowden cable guide  
8 Screw

- 9 Screw  
10 Seat rail  
11 Bowden cable guide  
S59/1s3 Easy entry and exit ON and OFF switch

 	Remove/install		
1	Remove front seat		AR91.10-P-1000Q
2	Unscrew bolts (2) from right side paneling (1)		
3	Remove side paneling (1)		
4	Unscrew bolt (4) for side paneling (3)		
5	Remove side paneling (3)		
6	Pry off Bowden cable fuse (5)		
7	Unhinge Bowden cable (6)		
8	Unscrew bolt from Bowden cable guide (7)		
9	Remove Bowden cable guide (7)		
10	Unscrew bolt (8) from easy entry and exit ON and OFF switch (S59/1s3)		
11	Remove easy entry and exit ON and OFF switch (S59/1s3)		
12	Unscrew bolt (9) from the seat rail (10)		
13	Twist Bowden cable guide (11) to the left and remove		
14	Detach Bowden cable (6) at bottom		
15	Install in the reverse order		
16	Carry out function check		