


Picture 1



P27.10-2138-10

Picture 2


1 Magnet (A 000 988 01 52)

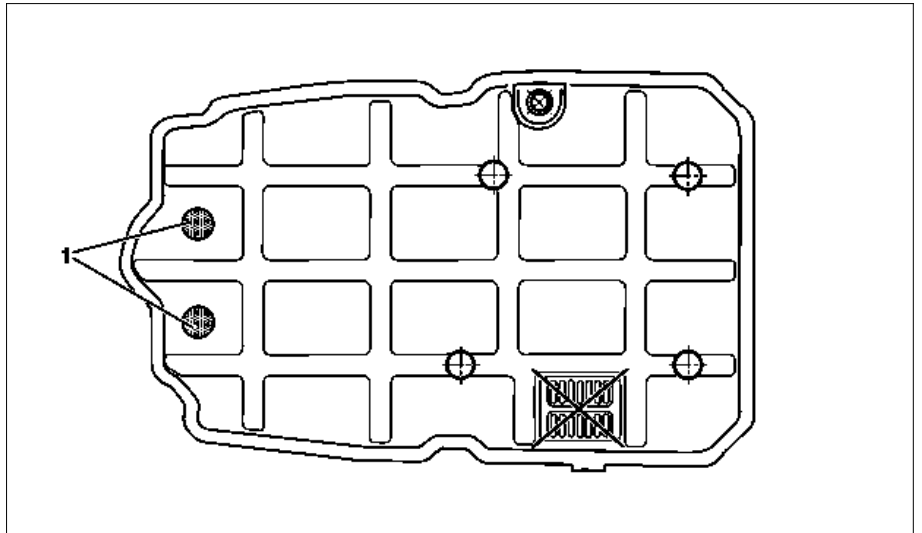

P27.10-2259-05

Picture 3


2 Magnet, round

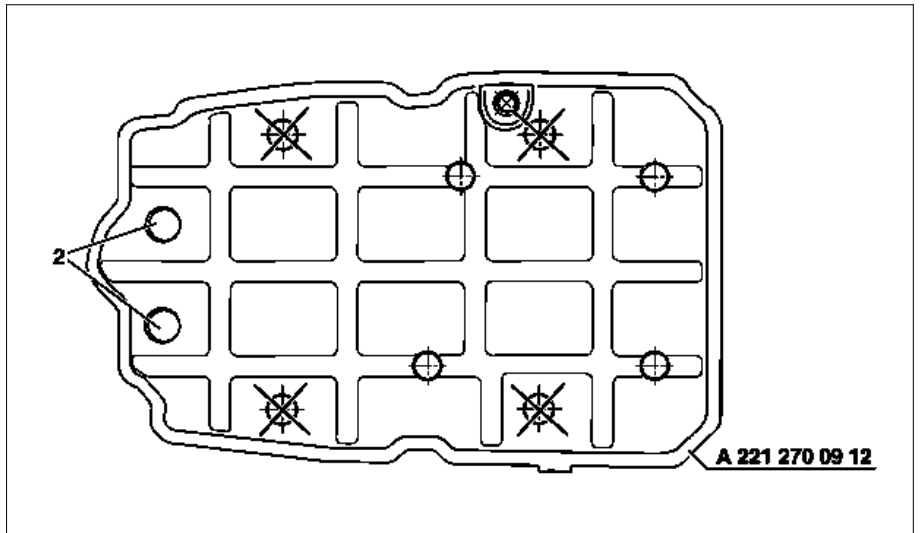

P27.10-2260-05

Picture 4

3 Magnet, rectangular

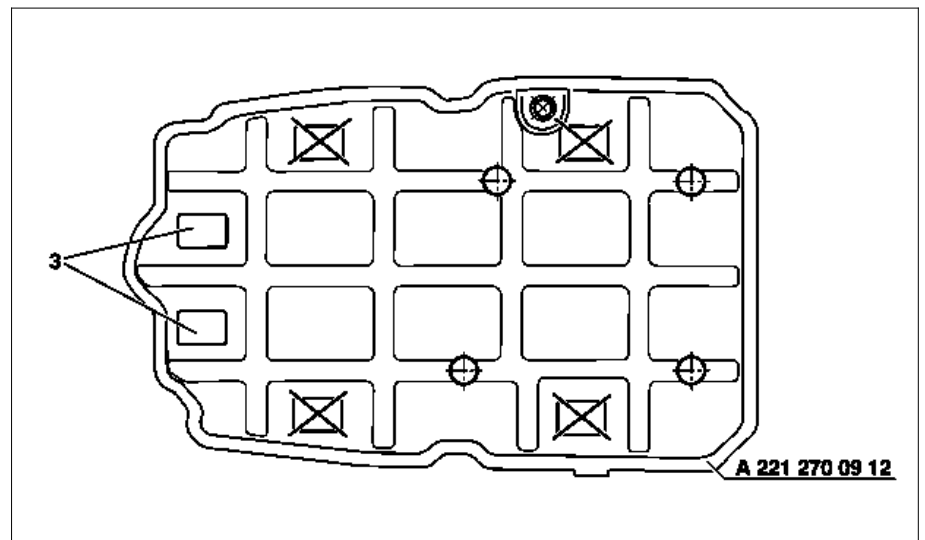

P27.10-2261-05

i Should it be necessary to install a new oil filter (e.g. at an oil change or in the event of severe contamination), only the oil filter with the part number **A 221 277 00 95** should still be used with immediate effect.

The following should be observed due to the revised dimensions:

Oil pans without bevels (see picture 1) and pipes (black) as well as a grid magnet and the oil pan gasket must be replaced by new parts in order to be able to install the new filter.

Oil pan with bevel: A 221 270 09 12
 Overflow pipe (white): A 251 271 00 97
 2 Magnets: A 000 988 01 52
 Oil pan gasket: A 220 271 01 80

Observe positioning of the 2 magnets (see picture 2).

With the oil pan with bevel and pipe (white) the new filter can be installed, only new magnets must be used if necessary.

If the grid magnet (A 220 271 00 98) is installed, it must be replaced by 2 magnets A 000 988 01 52.

Observe positioning of the 2 magnets (see picture 2).

If 6 magnets (round or rectangular) are installed, 4 must be removed and the other 2 positioned as in picture 3 and 4.

Parts ordering notes

Part no.	Designation	Quantity
A 221 270 09 12	Oil pan	1
A 251 271 00 97	Overflow pipe	1
A 000 988 01 52	Round magnets	2
A 220 271 01 80	Oil pan gasket	1