


Assignment of rear fuse and relay box

50-77 Fuses

K40/5 Rear fuse and relay module

Q-U Relay

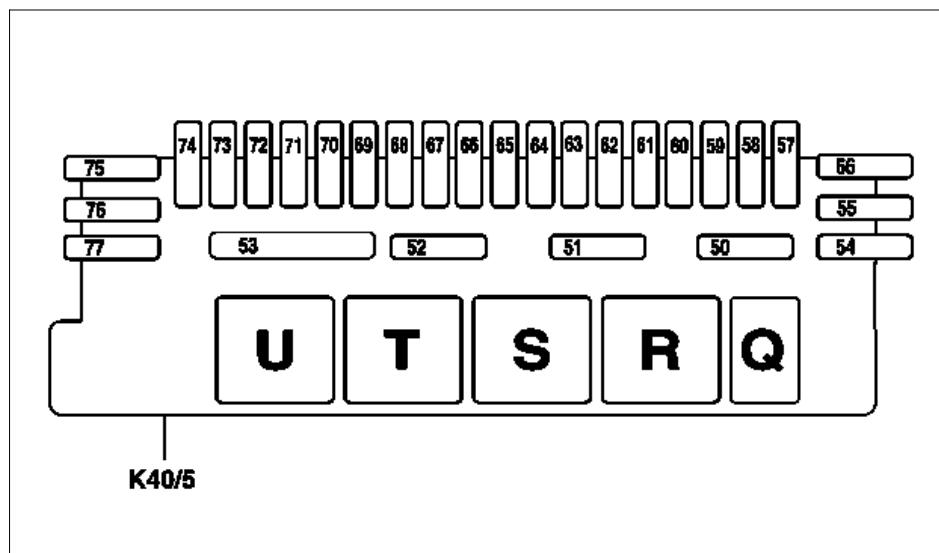

P54.15-2033-05

Fuse	Terminal	Cable ID (fused line)	Fused function	Fuse rating in amperes (A)
f50	30	-	● Spare	-
f51	30	-	Valid for engine 113.995 (AMG): ● Charge air cooler circulation pump relay (K40/5kR)	7.5
f52	30	- BUBK 2,5 BUWH 2,5	Valid for engine 113.995 (AMG), 275: ● Fuel pump relay (K40/5kT) Valid for engines 272, 273: ● Fuel pump control unit (N118) ● Fuel pump (M3)	30
f53	30	- BK 2.5	Valid for code (228) stationary heater: ● STH radio remote control receiver (A6/1)	30
f54	30	RDWH 2.5	● Audio gateway control unit (N93/1)	20
f55	30	RDWH 0.5	Valid for code (228) stationary heater: ● STH control unit (A6n1)	5
f56	30	RDYE 2.5	Valid for code (498) Japan version: ● VICS power supply separation point (X137/1)	20
f57	30	RDBU 1.5	Valid for code (889) Keyless Go: ● Left antenna amplifier module (A2/64) ● Right antenna amplifier module (A2/65). ● Rear shelf antenna amplifier (A2/67)	5
f58	30	GYBK 0,75	Valid for code (889) Keyless Go: ● Left door Keyless Go lift solenoid (L12) ● Right door Keyless Go lift solenoid (L12/2) ● Keyless Go control unit (N69/5)	7,5
f59	30	RDBK 0.5	● Navigation processor (N41/1)	5
f60	30	RDVT 1.0	Valid for engine 275.981 (AMG): ● Charge air cooler circulation pump relay (K60)	7.5
f61	30	RDVT 4.0	Valid for engine 113.995 (AMG), M275: ● Circuit 15R/30 cutoff relay (K75)	30
f62	30	RDPK 2.5 RDVT 4.0	Valid for engines 272, 273: ● RVC control unit (N52) ● Circuit 15R/30 cutoff relay (K75)	25
f63	30	RDBK 2.5	● RVC control unit (N52)	25
f64	30	RDBK 0.5 RDBK 0.5	Valid for code (813) voice control system (VCS): ● Voice control system control unit (A35/11) Valid for code (491) USA version: ● SDAR control unit (N87/5)	5

f65	30	RDBK 0.5	Valid for code (359) TELE AID emergency call system: ● Emergency call system control unit (N123/4)	5
f66	30	RDYE 2.5	Valid for code (810) sound system: ● Sound amplifier (A2/13)	25
f67	30	BKRD 0.5	Valid for code (220) Parktronic system (PTS): ● PTS control unit (N62)	5
f68	30	BK 2.5	● Roll bar (RB) deployment solenoid (Y57/1)	25
f69	30	RDGN 2.5	● RVC control unit (N52)	25
f70	30	RDYE 0.5	Valid for code (475) Tire pressure monitor (Beru): ● TPM [RDK] control unit (N88)	5
f71	30	RDWH 1.5	● Pneumatic system equipment with combined functions (A37)	20
f72	30	-	-	10
f73	30	RDWH 4.0	● RVC hydraulic unit (A7/5)	40
f74	30	RDBU 0.5	● RVC control unit (N52) ● ATA [EDW] inclination sensor (B33)	5
f75	30	RDGN 0,5	Valid for code (860) TV tuner: ● TV tuner MOST) (A2/10)	5
f76	30	RDBK 0.75 RDBK 0.75 RDBK 1.5	Valid for code (348) EMERGENCY CALL system with CODE (498) Japanese version with code (491) US-version: ● E-call control unit (A35/8) Valid for code (278) complete telephone preinstallation without portable CTEL: ● Portable CTEL separation point (X39/37) Valid for code (388) UPCI [UHI] system portable CTEL: ● E-net compensator (A28/3) ● Universal Portable CTEL Interface (UPCI [UHI]) control unit (N123/1)	7.5
f77	30	RDYE 0,75 RDYE 2.5 RDYE 2.5 RDYE 2.5	Valid for code (819a) CD changer except code (498) Japan version: ● CD player with changer (A2/6) Valid for code (352a) COMAND operating and display system except code (498) Japan version: ● COMAND operating, display and control unit (A40/3) Valid for radio (standard): ● Radio (A2) Valid for code (352a) COMAND operating and display system with code (498) Japan version: ● COMAND operating, display and control unit (A40/3)	15 20