
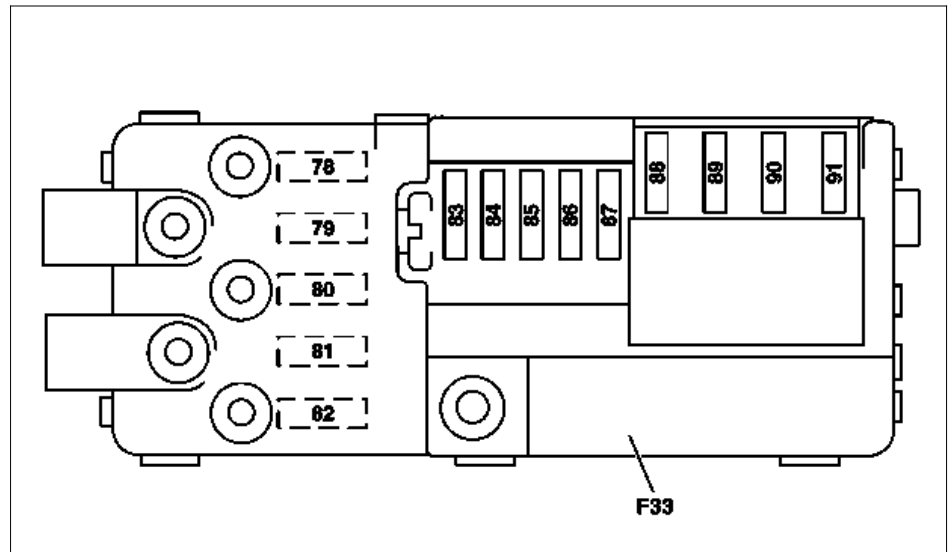


GF54.15-P-1256-15GM	Fuse assignment of battery compartment prefuse box	
---------------------	---	---

F33 Battery compartment prefuse box



P54.15-2731-05

Fuse	Clamping device	Cable ID (cable fused)	Fused function	Rating in amperes (A)
78	30	16.0 RD	Valid for heater booster for model 164.1 up to 30.6.09: ● PTC heater booster (R22/3) Valid for HB [heater boosted] for model 164.1 as of 1.7.09: ● PTC heater booster (R22/3)	100 150
79	30	6.0 RD	● Rear SAM control unit (N10/8)	60
80	30	6.0 RD	● Rear SAM control unit (N10/8)	60
81	30	4.0 RD	Valid for engine 642.820: ● AdBlue® relay supply (K27/7) Valid as of 1.7.09 without engine 642.820: ● Engine compartment fuse and relay box (F58) Valid for model 164.195: ● Vacuum pump relay (+) (K109)	40 150
82	30	10.0 RD	● Load compartment fuse and relay box (F4)	100
83	30	0.5 RD	Valid for code (494) USA version: ● Weight Sensing System (WSS) control unit (N2/13) ● Restraint systems control unit (/)N2/7	5 10
84	30	0.75 RDBK	Valid for code (U80) 115 V socket: ● DC/AC converter control unit (115 V socket) (N24/3)	25
85	30	1.5 RDWH	● Cockpit fuse box (F3)	30
86	30	4.0 RDBK	Valid for code (430) Off-road package: ● Transfer case control unit (N15/7) Valid for model 164.195: ● Fuse and relay box 2, engine compartment (F58/1)	30 15
87	30	2.5 RDWH 1.5 RDBK	● Front SAM control unit (N10)	70
88	30	6.0 RD	● Front SAM control unit (N10)	70
89	30	6.0 RD	● Front SAM control unit (N10)	70
90	30	6.0 RD	● Front SAM control unit (N10)	70
91	30	4.0 RD	● AC air recirculation unit (A32)	40