


F3 Cockpit fuse box

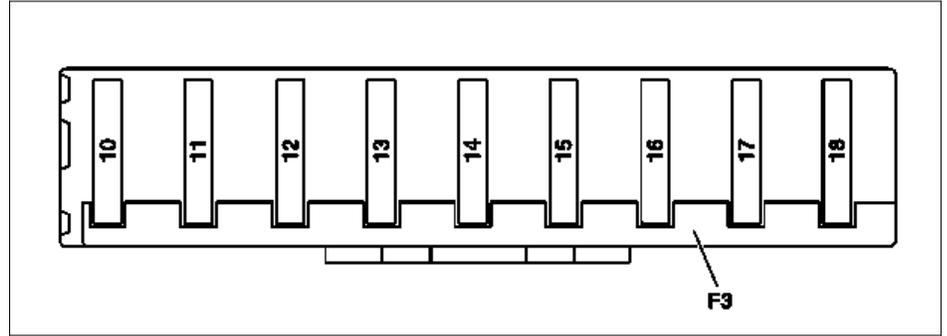

P54.15-2730-04

Fuse	Clamping device	Cable ID (cable fused)	Fused function	Rating in amperes (A)
10	30	1.0 RD	Valid for code (581) comfort automatic air conditioning: <ul style="list-style-type: none"> ● Booster blower electronic blower controller (N29/2) 	10
11	30	0.5 RDWH	<ul style="list-style-type: none"> ● Instrument cluster (A1) 	5
12	30	1.5 RDBK	Valid without code (581) Comfort automatic air conditioning: <ul style="list-style-type: none"> ● AAC [KLA] control and operating unit (N22) Valid for code (581) comfort automatic air conditioning: <ul style="list-style-type: none"> ● Comfort AAC [KLA] control and operating unit (N22/7) 	15
13	30	0.5 RDBU	<ul style="list-style-type: none"> ● Steering column module (N80) ● Upper control panel control unit (/)N72/1 	5
14	30	0.75 RDWH	<ul style="list-style-type: none"> ● EIS [EZS] control unit (N73) 	7.5
15	30	0.5 RDBK 0.5 RDBK	Valid for code (245) Electronic compass: <ul style="list-style-type: none"> ● Electronic compass (B26) Valid for code (518) Media interface: <ul style="list-style-type: none"> ● Media interface control unit (/)N125/1 	5
16	-	-	<ul style="list-style-type: none"> ● Spare 	-
17	-	-	<ul style="list-style-type: none"> ● Spare 	-
18	-	-	<ul style="list-style-type: none"> ● Spare 	-