
MODEL 203.0, 209.3 with CODE (810) Sound system

Illustrated on model 203.0

2 Nuts

3 Fiber optic cable connector

4 Clutch A2/13 Sound amplifier

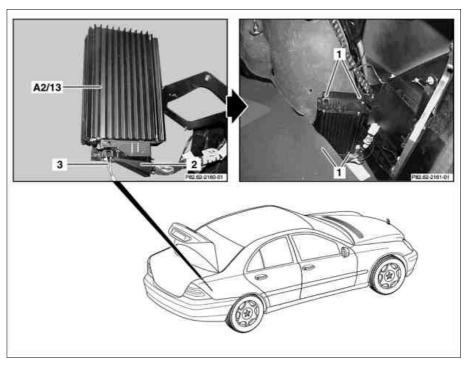

P82.62-2159-06

Modification notes

| 2 | 4.5.06 | "Disconnect/connect ground line on battery" removed | |
|---|--------|---|--|
| | | | |

| 33 33 | Remove/install | | |
|--------------|--|--|---------------------|
| 1 | Remove right side paneling in trunk | Refer to: ↓ | |
| | | Model 203.0 | AR68.30-P-4600P |
| | | Model 209.3 | AR68.30-P-4600PB |
| 2 | Unscrew nuts (2) | | |
| 3 | Detach sound amplifier (A2/13) from mounting frame | | |
| 4 | Disconnect fiber optic cable connector (3) | Do not kink or stretch the D2B fiber optic cable. i Install caps on fiber optic cable connector and equipment connector. Refer to: Cover fiber optic cable | AR82.95-P-0005-01A |
| (3) | Notes on fiber optic cable | Model 129, 163, 168, 170, 202, 203, 208, 209 210, 215, 220, 230, 463.243 /244 /245 /246 /247 /248 /249 /250 /254 /309 /322 /323 /332 /333 | ,AH82.70-P-0001-02A |
| 5 | Disconnect connector (4) | | |
| 6 | Install in the reverse order | | |