


1 to 20 Socket

N10/2 Rear SAM control unit with fuse and relay module

A to H Relay

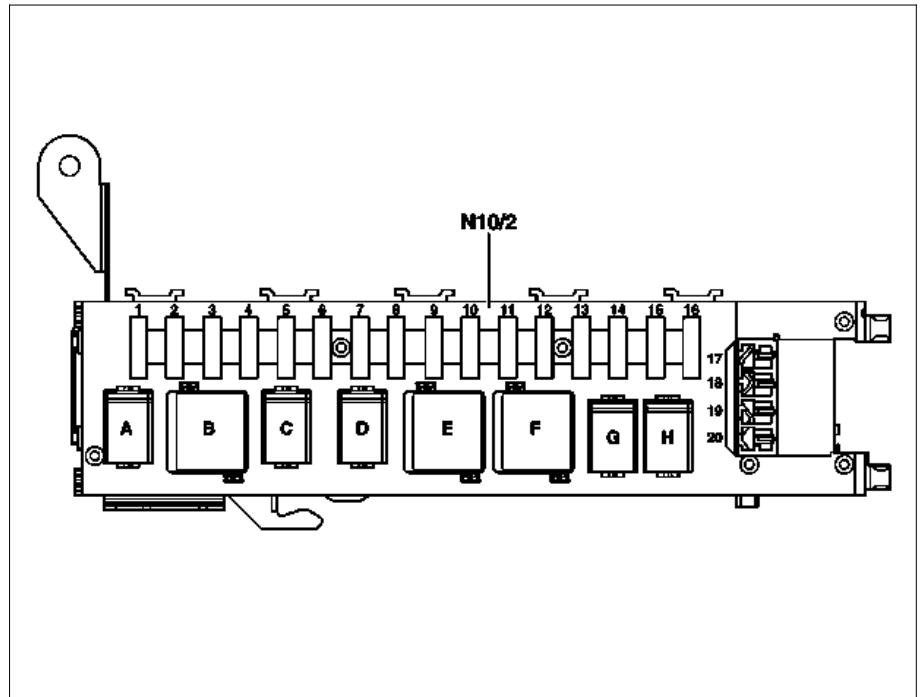

P54.15-2206-06

Socket	Fuse	Circuit	Plug cage	Fused line	Fused function	Rating in amperes (A)
1	N10/2f1	15R	1, pin 6	BKPK 2.5 mm ²	Valid for model 203.0/2/7 with code (242) Electrically adjustable front passenger seat with memory: <ul style="list-style-type: none"> Front passenger front seat adjustment control unit with memory (N32/2) 	30
			1, pin 6	BKPK 2.5 mm ²	Valid for model 203.0/2 without code (242) Electrically adjustable front passenger seat with memory: <ul style="list-style-type: none"> Front passenger partially-electric seat adjustment switch (S23/1) 	30
2	N10/2f2	15R	1, pin 5	BKYE 2.5 mm ²	Valid for model 203.0/2/7 with code (275) Electrically adjustable driver seat, steering column and outside mirrors with memory: <ul style="list-style-type: none"> Driver front seat adjustment control unit with memory (N32/1) 	30
			1, pin 5	BKYE 2.5 mm ²	Valid for model 203.0/2 without code (275) Electrically adjustable driver seat, steering column and outside mirrors with memory: <ul style="list-style-type: none"> Driver partially-electric seat adjustment switch (S22/1) 	30
3	N10/2f3	30	17, pin 1	RDGN 0.75 mm ²	Valid for model 203.0 with code (220) Parktronic system (PTS): <ul style="list-style-type: none"> Dome lamp (A44/3e3) 	7.5
			17, pin 1	RDGN 0.75 mm ²	Valid for model 203.7: <ul style="list-style-type: none"> Dome lamp (E15/3e3) 	7.5
			17, pin 1	RDGN 0.5 mm ²	Valid for model 203.2 with code (220) Parktronic system (PTS): <ul style="list-style-type: none"> Dome lamp (A44/3e3) Right luggage compartment lamp (E18/4) Left luggage compartment lamp (E18/5) 	7.5
			16, pin 1	RDGN 0.5 mm ²	Valid for code (228) Stationary heater: <ul style="list-style-type: none"> STH radio remote control receiver (A6/1) 	7.5
			9, pin 1	RDYE 0.75 mm ²	Valid for code (860) TV tuner: <ul style="list-style-type: none"> TV tuner (A2/42) (up to 29.2.04) TV tuner (MOST) (A2/10) (as of 1.4.04) 	20
4	N10/2f4	30	-	-	<ul style="list-style-type: none"> Fuel pump relay (N10/2kA) 	20
5	N10/2f5	30	27, pin 3	RD 0.75 mm ²	Valid for engine 112.961 (up to 31.3.04): <ul style="list-style-type: none"> Charge air cooler circulation pump (M44) 	20
			-	-	Valid without engine 112.961: <ul style="list-style-type: none"> Backup relay 2 (N10/2kC) 	
6	N10/2f6	30	28, pin 1	-	<ul style="list-style-type: none"> Spare 	25
7	N10/2f7	15R	-	-	<ul style="list-style-type: none"> Backup relay 1 (N10/2kD) 	7.5

8	N10/2f8	30	23, pin 4	RDYE 0.75 mm ²	Valid for model 203.0/7 (up to 31.3.04), model 203.2: ● Amplifier module 1, window antenna (A2/71)	7.5
			23, pin 4	RDYE 0.75 mm ²	Valid for model 203.0/7 (as of 1.4.04): ● Amplifier module 2, window antenna (A2/72)	7.5
			4, pin 4 4, pin 5	RDBU 0.5 mm ² RDWH 0.5 mm ²	Valid for code (551) Anti-theft alarm system (ATA [EDW]): ● Alarm signal horn (H3) ● ATA [EDW] inclination sensor (B33)	7.5
9	N10/2f9	30	22, pin 4	RDBU 2.5 mm ²	● Overhead control panel control unit (N70)	25
10	N10/2f10	15R	20, pin 5	BK 2.5 mm ²	● Heated rear window (R1)	40
11	N10/2f11	30	20, pin 3	-	● Spare	20
12	N10/2f12	15R	20, pin 2	BKGN 1.5 mm ²	Valid for model 203.2: ● Interior socket (X58/1)	15
			20, pin 2	RDBU 1.5 mm ²	Valid for model 203.0 with code (494) USA version (up to 31.3.04): ● Power outlet (X58/27)	15
13	N10/2f13	15R	19, pin 1	BKYE 0.75 mm ²	Valid for model 203.0/2 with code (404) Left multicontour seat and code (405) Right multicontour seat: ● Multicontour seat pneumatic pump (M40)	5
			5, pin 2	BKYE 0.5 mm ²	Valid for code (813) Voice control system (VCS [SBS]): ● Voice control system control unit (A35/11)	5
			5, pin 2	RDBK 0.75 mm ²	Valid for code (498) Japan version: ● VICS+ETC voltage supply separation point (X137/1)	5
			12, pin 5	BKGY 0.5 mm ²	Valid for model 203.0/2 without code (220) Parktronic system (PTS): ● Rear dome lamp (E15/3)	5
			12, pin 5	BKGY 0.5 mm ²	Valid for model 203.0/2 with code (220) Parktronic system (PTS): ● Rear dome lamp PTS warning indicator (A44/3) ● PTS control unit (N62)	5
14	N10/2f14	15R	20, pin 1	BKYE 1.5 mm ²	Valid for model 203.2: ● Tailgate wiper motor (M6/4)	15
15	N10/2f15	30	-	-	● Fuel filler cap polarity change relay 1 (N10/2kG) ● Fuel filler cap polarity change relay 2 (N10/2kH)	10
16	N10/2f16	30	5, pin 1	RDBK 0.75 mm ²	Valid for code (813) Voice control system (VCS [SBS]): ● Voice control system control unit (A35/11)	20
17	N10/2f17	30	S17 (external fuse)	RDGN 2.5 mm ²	Valid for code (550) Trailer hitch: ● Trailer recognition control unit (N28/1)	20
18	N10/2f18	30	S18 (external fuse)	RDYE 2.5 mm ²	Valid for code (550) Trailer hitch: ● Trailer hitch socket (13-pin) (X58)	20
19	N10/2f19	30	S19 (external fuse)	RDWH 1.5 mm ²	Valid for model 203.0/2 with code (404) Left multicontour seat and code (405) Right multicontour seat: ● Multicontour seat pneumatic pump (M40)	20
20	N10/2f20	30	S20 (external fuse)	RDBU 1.5 mm ²	Valid for model 203.2/7 with code (494) USA version: ● Power outlet (X58/27)	15
				RDBU 0.75 mm ²	Valid for model 203.0 with code (540) Electric rear window roller blind: ● Rear window roller blind relay (K74)	15