


MODEL 203


Shown in model 203.0

- 1      *Bolts*  
 2      *Coupling connection at electronic  
blower control unit (A32n1)*  
 A32m1    *Blower motor*  
 A32n1    *Electronic blower control unit*

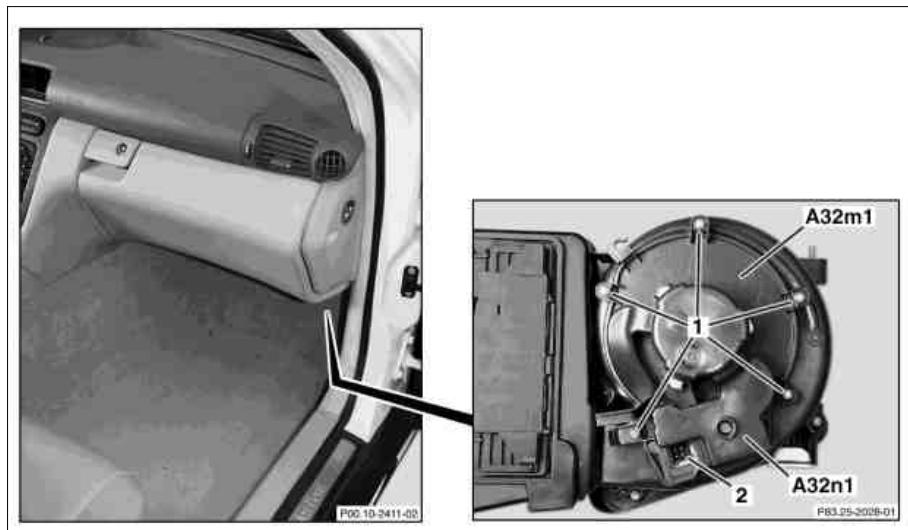

P83.25-2029-05

		Removing, installing		
1		Remove cover below instrument panel (right)		AR68.10-P-1520P
2		Disconnect coupling from electronic blower control unit (A32n1)		
3		Expose lead at blower motor (A32m1)		
4		Unscrew bolts (1)	☒ Torx bit set	*000589011000
5		Remove blower motor (A32m1) with blower control unit (A32n1)	(*) Do not lay blower motor (A32m1) on the fan wheel.	
6		Install in the reverse order		

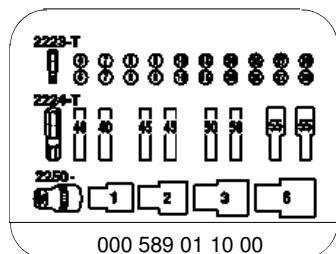

Torx bit set