

P88.50-2093-09

- 1 Trunk lid lock
- 2 Trunk lid paneling
- 3 Hinge lever cover
- 4 Hazard warning triangle
- 5 Bracket/hazard warning triangle
- 6 Panel
- 7 Bolts for cover
- 8 Nut for outer cover
- 9 Trunk lid
- 10 Screws for trunk lid lock
- 11 Pushbutton lock
- 12 Screws for pushbutton lock



P88.50-2097-07

- 13 Push-button lock cover
- 14 Control cable to trunk lid lock
- 15 locking eye
- 16 Bolts for lock striker

☒ ☒	Remove/install		
1	Remove warning triangle (4)		
2	Remove bracket (5)		
3	Remove hinge lever cover (3)		
4	Remove trunk lid paneling (2)	ⓘ	Replace damaged clips.
5	Unscrew nut (8) and screws (7) and remove cover (6)		
6	Disconnect electrical connector from trunk lid lock (1)		
7	Loosen screws for trunk lid lock (10)		
8	Disconnect electrical connector from pushbutton lock (11)		
9	Unscrew screws for pushbutton lock (12)		
10	Open pushbutton lock cover (13)		


11	Unhook cable (14)		
12	Unscrew screws for striker eye (16)		
13	Remove striker eye (15) from rear end center section		
14	Install in the reverse order		
	Adjust		
15	Screw in screws for trunk lid lock (10)	Center trunk lid lock in recess in trunk lid	
16	Fully tighten bolts (10)		*BA88.50-P-1002-01A
17	Align striker eye (15)	Centered with catch of trunk lid lock (1).	
18	Check trunk lid (9) fit in relation to rear fenders	Observe gaps! Gaps on hoods, doors and lids. Feeler gauge If fit is not precise: ↓ Adjust trunk lid.	*BE60.00-P-1003-01E *129589032100 AR88.50-P-5200P
19	Adjust striker eye (15)	The edges of the trunk lid (9) should be aligned with the fenders.	
20	Fully tighten bolts (16)		*BA88.50-P-1004-01A
21	Check closing system for proper function	Previously unlock trunk lid lock again.	

Test values for gap dimensions on hoods, doors and lids

Number	Designation	Model
		203.004/006/ 007/008/016/ 018/020/035/ 040/042/043/ 045/046/052/ 054/056/061/ 064/065/081/ 084/087/092
BE60.00-P-1003-01E	Gap dimension Trunk lid to rear fender, top	Dim. "F" mm 3,5 (±1)
	Trunk lid to rear lamp unit	Dim. "M" mm 4 (±1)
	Rear fender to rear lamp unit	Dim. "U" mm -
	See picture	AR60.00-P-0700-01 P

Trunk lid

Number	Designation	Model
		203
BA88.50-P-1002-01A	Bolt to trunk lid lock Nm	10
BA88.50-P-1004-01A	Bolt to locking eye Nm	10

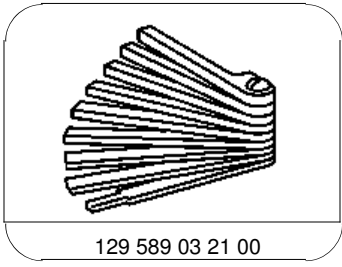

129 589 03 21 00

Feeler gauge