





**Document number:** pe54.21-p-2119-97fa

**Document title:** Wiring diagram for upper control panel control unit

<b>Code:</b>	<b>Designation:</b>	<b>Position:</b>
R13/2	Left front backrest heated cushion	19L
R13/2	Left front backrest heated cushion	32L
R13/3	Right front seat heated cushion	23L
R13/3	Right front seat heated cushion	29L
R13/3	Right front seat heated cushion	35L
R13/4	Right front backrest heated cushion	24L
R13/4	Right front backrest heated cushion	36L
U12	Valid for left-hand drive vehicles	4E
U12	Valid for left-hand drive vehicles	31G
U12	Valid for left-hand drive vehicles	37G
U12	Valid for left-hand drive vehicles	26G
U12	Valid for left-hand drive vehicles	29G
U13	Valid for right-hand drive vehicles	5E
U13	Valid for right-hand drive vehicles	31G
U13	Valid for right-hand drive vehicles	36G
U13	Valid for right-hand drive vehicles	26G
U13	Valid for right-hand drive vehicles	29G
U208	Valid for model 203.7	25E
U29	Valid for AAC [KLA]	1H
U57	Valid for model 203.2	30E
U57	Valid for model 203.2	23A
U58	Valid for model 203.0	30E
U58	Valid for model 203.0	22A
U58	Valid for model 203.0	30A
U673	Valid for comfort AAC [K-KLA]	1G
W18	Ground (left front seat crossmember)	18G
W18	Ground (left front seat crossmember)	33L
W18	Ground (left front seat crossmember)	27L
W18	Ground (left front seat crossmember)	21L
W19	Ground (right front seat crossmember)	21L
W28/1	Ground (left inner door sill)	4F
W28/2	Ground (right inner door sill)	3F
X30/6	Cockpit voltage distributor (CAN) connector	6L
X55/3	Driver seat connector block	16J
X55/3	Driver seat connector block	25J
X55/3	Driver seat connector block	30H
X55/4	Front passenger seat connector block	22J
X55/4	Front passenger seat connector block	28J
X55/4	Front passenger seat connector block	34H

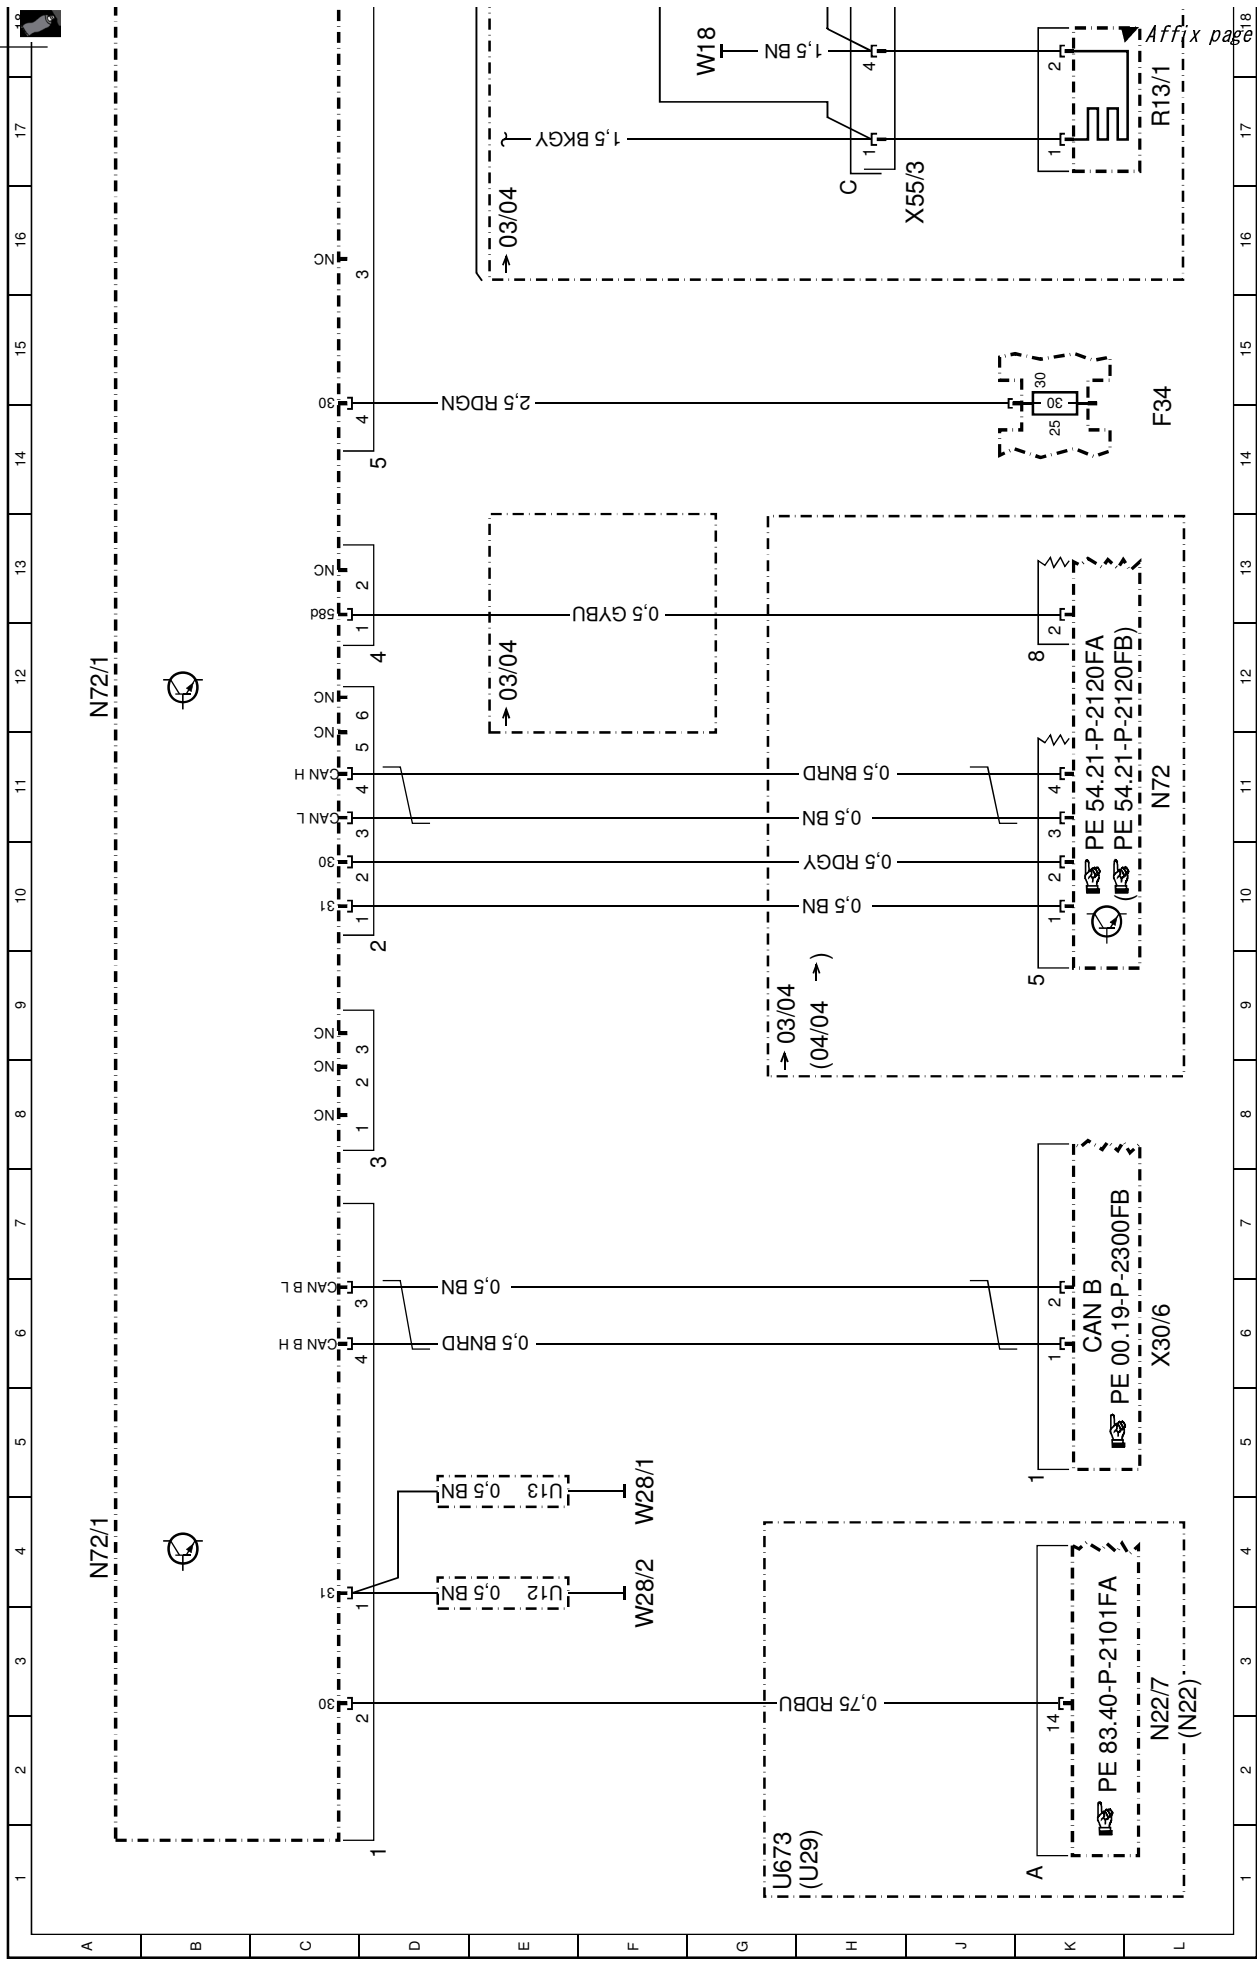

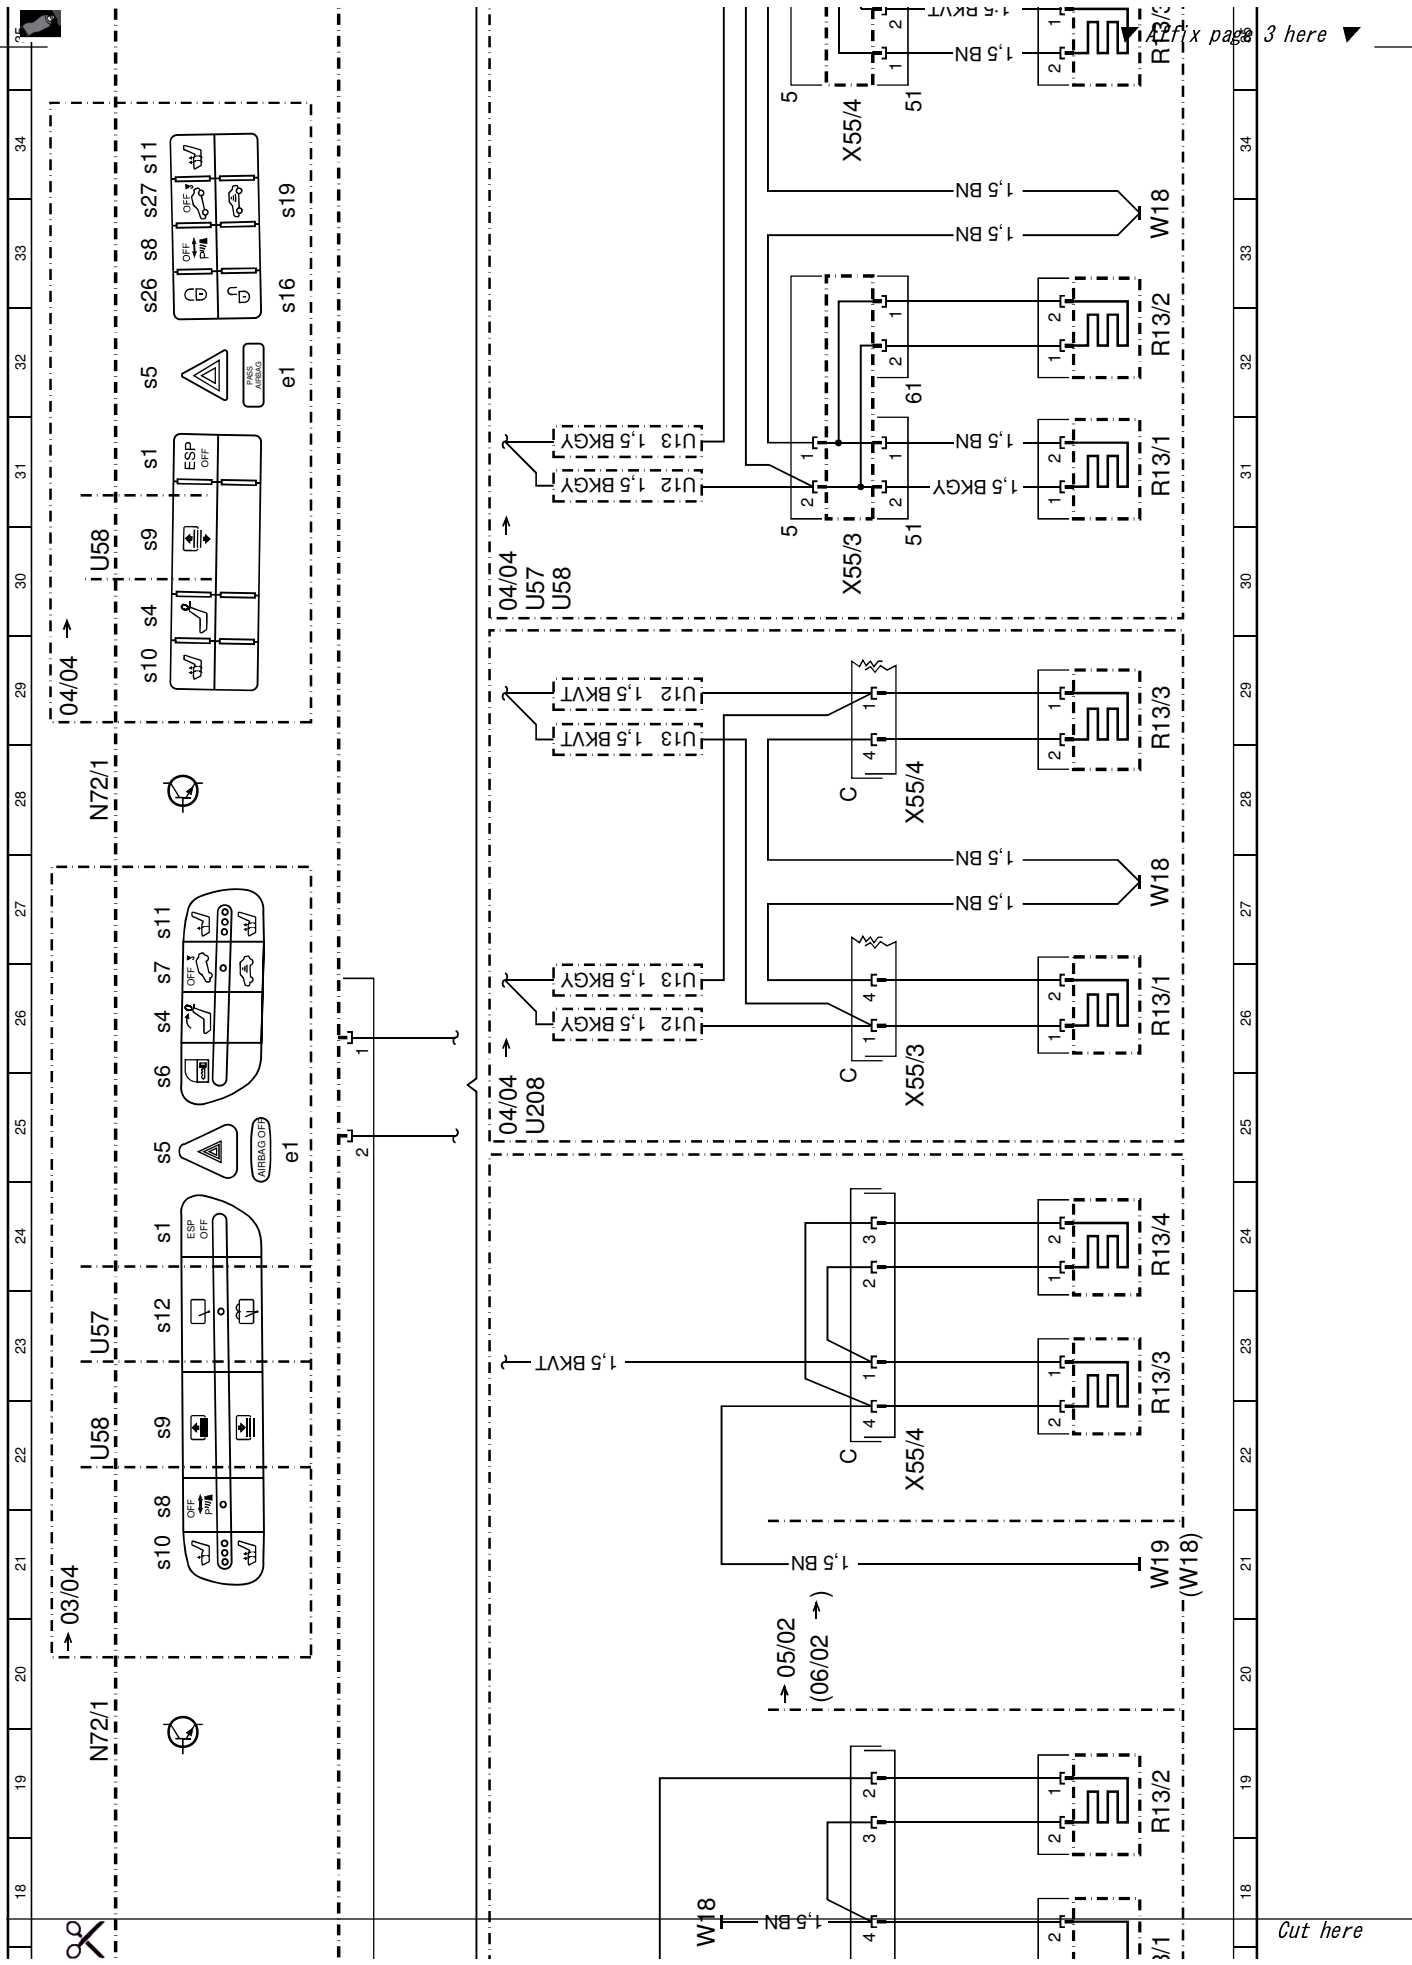

Fix page 3 here

Cut here

