


MODEL 209 with CODE (889) Keyless Go Antenna in the door

- 1 Door foil
- 2 Electrical connector

- A2/38 Left door keyless go antenna
- A2/40 Right door keyless go antenna

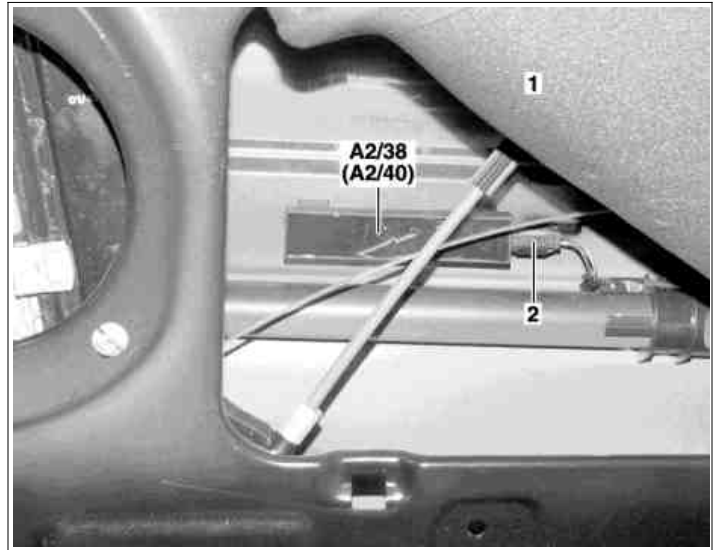


P80.35-2141-11

Modification notes

| | | |
|---------|--|--|
| 11.2.04 | Disconnect/connect/remove ground lead from battery | |
|---------|--|--|

| ☒ ☒ | Remove/Install | | |
|-----|--|---|---|
| 1 | Remove door lining | | AR72.10-P-1000Q |
| 2 | Pull off door foil (1) at bottom left and attach using adhesive tape | <p>i Carefully detach door foil (1) and check for damage, replace if necessary.</p> <p>i Installation: Check butyl cord of door foil (1), if necessary fit new butyl cord. Press door foil (1) on with roller.</p> <p>⚠ Installation: Carefully press on door foil (1) to ensure there are no leakages.</p> <p>Sealing cord</p> <p>☑ Roller</p> | <p>*BR00.45-Z-1086-01A</p> <p>*168589056300</p> |
| 3 | Remove protective strip on front door | | AR88.80-P-6600P |
| 4 | Remove screws of left door Keyless Go antenna (A2/38) or right door Keyless Go antenna (A2/40) | | |
| 5 | Slide left door Keyless Go antenna (A2/38) or right door Keyless Go antenna (A2/40) and remove | | |
| 6 | Disconnect electric connector (2) | | |
| 7 | Install in the reverse order | | |
| 8 | Perform function check | | |

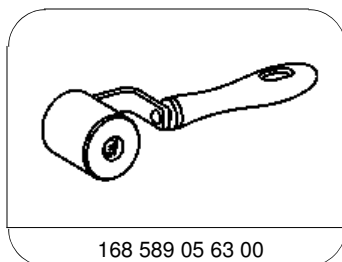

168 589 05 63 00

Roller

Repair materials

| Number | Designation | Order number |
|--------------------|--|--------------------|
| BR00.45-Z-1086-01A | Soft top frame sealing profile with metal core 35 m, SEALANT/butyl Bostik 1127 | A 005 989 12 71 10 |