


MODEL 209 except CODE (581b) Convenience automatic air conditioning

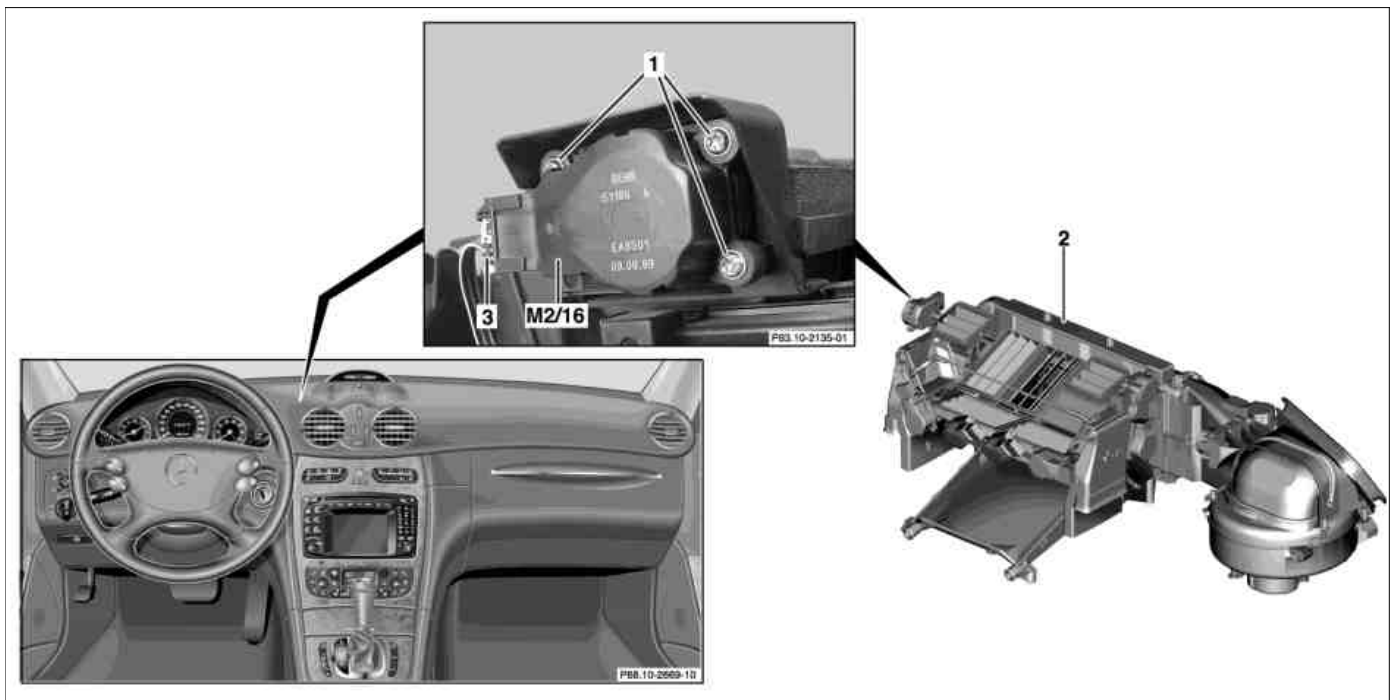

P83.10-2256-09

- 1 Bolts
- 2 AC housing

- 3 Electrical connector

- M2/16 Left and right defroster flaps positioning motor

**Modification notes**

18.2.04	Disconnect/connect/remove ground lead from battery		
---------	----------------------------------------------------	--	--

	Remove/Install		
1	Remove instrument panel		AR68.10-P-1000Q
2	Remove bolts (1)		
3	Remove left and right defroster flap actuator motor (M2/16) from heater/AC housing		
4	Separate electrical connection (3)		
5	Install in the reverse order		
6	Connect STAR DIAGNOSIS, normalize left and right defroster flaps actuator motor (M2/16), read out and erase fault memory Connect STAR DIAGNOSIS and read out fault memory	Diagnosis system STAR DIAGNOSIS	AD00.00-P-2000-04A *WH58.30-Z-1048-13A
7	Perform function check		

**Commercially available tools**

Number	Designation	
WH58.30-Z-1048-13A	STAR DIAGNOSIS diagnosis system, Compact Passenger Car	6511 1801 00