


MODEL 230 with CODE (487) Active Body Control (ABC)



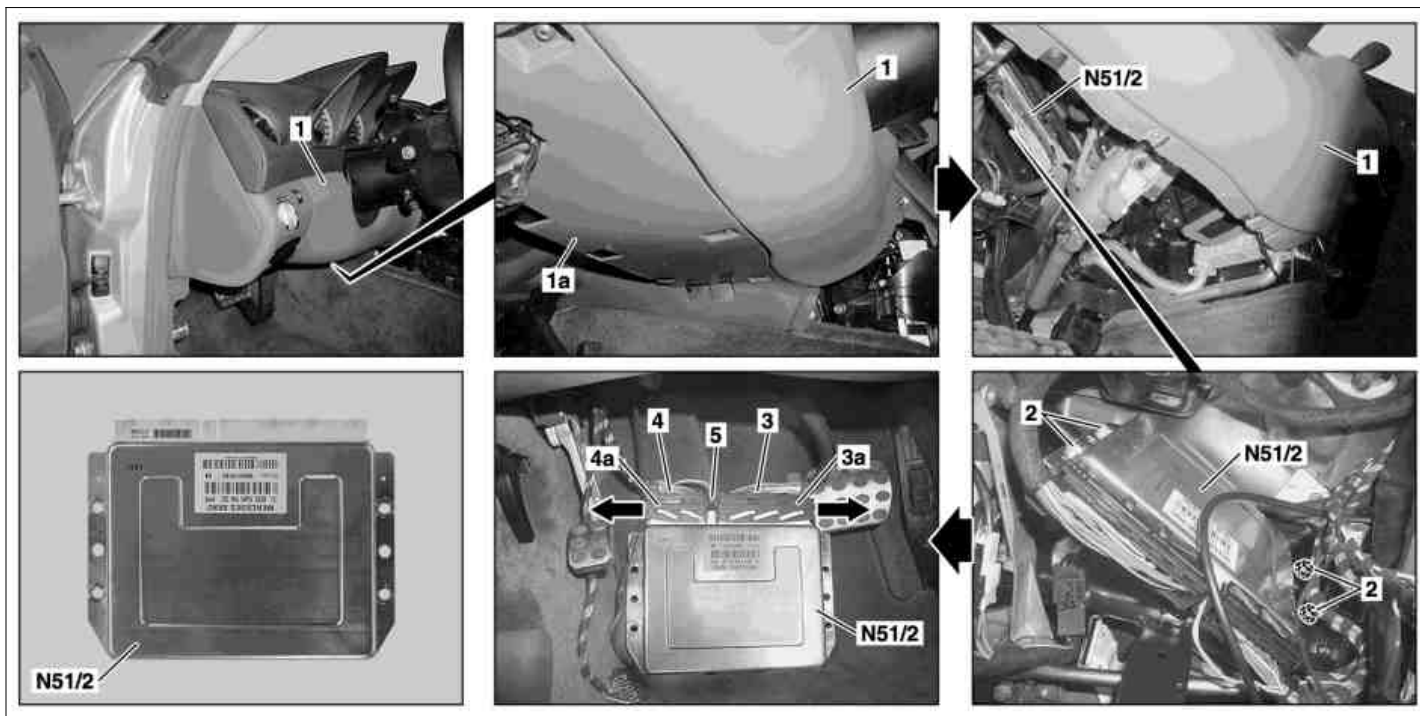


P32.50-2192-09

1 Left dashboard bottom section
 1a Cover
 2 Nuts

3 Electrical connector
 3a Lock slide
 4 Electrical connector

4a Lock slide
 5 Electrical connector

N51/2 ABC control unit

	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Switch off ignition		
2	Remove cover (1a) below bottom left part of dashboard (1)		AR68.10-P-1500R
3	Detach ABC control unit (N51/2) from bracket by unscrewing nuts (2)		*BA32.50-P-1001-03A
4	Remove ABC control unit (N51/2) from bracket and put down in footwell		
5	Pull out locking slide (3a) and locking slide (4a) on the ABC control unit (N51/2) all the way in the direction of the arrow and detach electrical connectors (3, 4)		
6	Unlock and detach electrical connector (5) on ABC control unit (N51/2)		
7	Install in the reverse order		
8.1	Check vehicle level at front and rear axle with electronic inclinometer and adjust if necessary	When replacing the ABC control unit (N51/2) Model 230.467/ 474/ 475/ 476 Model 230.479 up to model year 2006	AR40.20-P-0301R
8.2	Carry out control unit adaptations using STAR DIAGNOSIS	When replacing the ABC control unit (N51/2) Model 230.456/ 458/ 470/ 471/ 472/ 477 Model 230.479 as of model year 2006	

 Active Body Control (ABC)

Number	Designation	Model 230
BA32.50-P-1001-03A	Nut, ABC control unit to bracket	Nm 6