


Assignment of fuses in rear prefuse box

1-3 Fuses

F33 Rear prefuse box

X Direction of travel

i Multiple designations are available for fuses for model series 230.4.

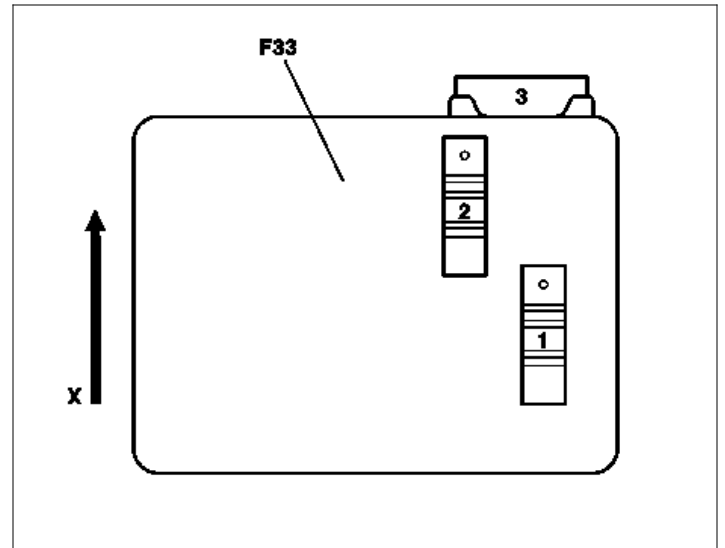

P54.15-2534-11

Fuse	Terminal	Cable ID (fused line)	Fused function	Rating in amperes (A)
f1	30z	RD 10.0	<ul style="list-style-type: none"> Passenger-side fuse and relay module (K40/4) 	60
f2	30z	RD 16.0	<ul style="list-style-type: none"> Rear fuse and relay module (K40/5) 	200
f3	30z	RD 1.5	<ul style="list-style-type: none"> Steering column module (N80) EIS [EZS] control unit (N73) ME-SFI [ME] control unit (N3/10) 	7.5