


Shown on vehicle with code (404) Left multicontour seat

- 1 Antenna rod
- 2 Antenna base
- 3 Antenna base
- 4 Antenna support
- 5 Antenna line

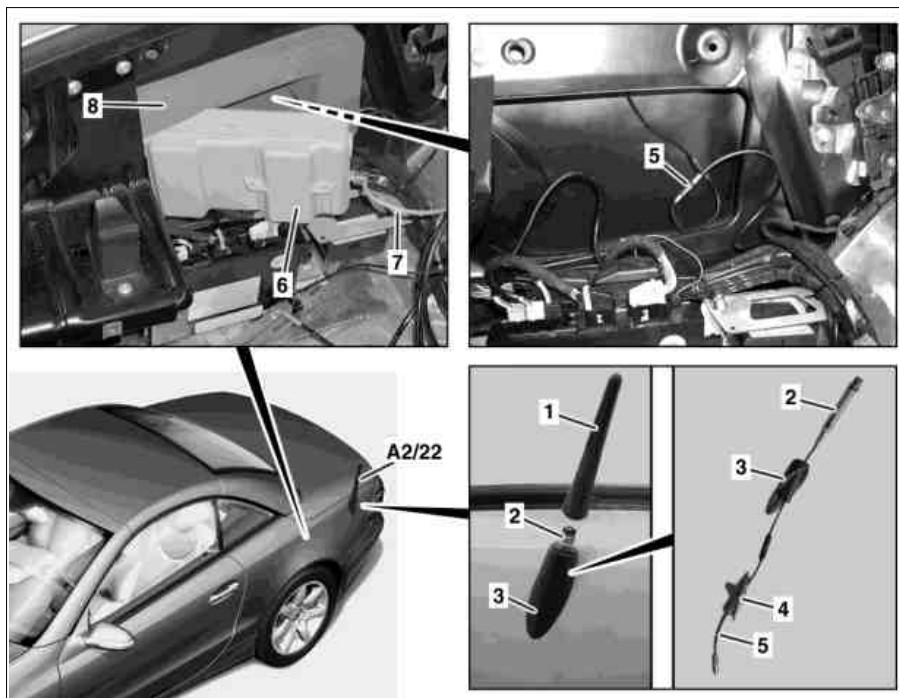

P82.70-3878-06

- 6 Overpressure reservoir (with code (404) Left multicontour seat or code (405) Right multicontour seat)
- 7 Pneumatic line (with code (404) Left multicontour seat or code (405) Right multicontour seat)

- 8 Foam padding (with code (404) Left multicontour seat or code (405) Right multicontour seat)

A2/22 Telephone antenna

	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove left side paneling in trunk		AR68.30-P-4800R
2	Remove overpressure reservoir (6), place to one side with pneumatic line (7) still connected and remove foam padding (8)	On vehicles with code (404a) Left multicontour seat or code (405) Right multicontour seat	AR91.25-P-1650R
3	Remove safety clamp and disconnect telephone antenna connector of antenna line (5)		
4	Unscrew antenna rod (1) of CTEL antenna (A2/22) at antenna base (2)		
5	Remove nut and remove antenna base (2) together with antenna line (5)	Carefully guide out antenna line (5) so that the insulation on antenna line (5) is not damaged.	
6	From the trunk, counterhold antenna support (4), remove antenna base (3) from outside and then remove antenna support (4) from inside		
7	Install in the reverse order		