


MODEL 230.4 except CODE (P99) Special model "AMG Black Series" starter battery

- 1 Ground cable
 2 Positive line
 3 Cover for positive terminal
 4 Retaining clip
 5 Vent grille

G1/4 Starter battery

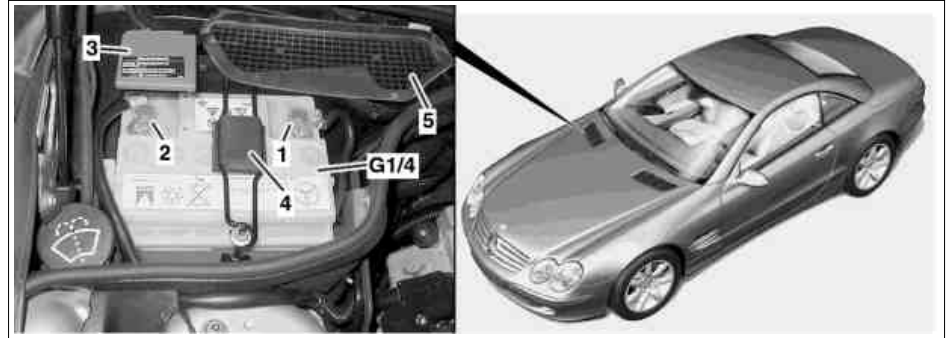

P54.10-2122-04

	Remove/install		
Danger!	Risk of explosion caused by oxyhydrogen gas. Risk of poisoning and caustic burns caused by swallowing battery acid. Risk of injury caused by burns to skin and eyes from battery acid or when handling damaged lead-acid batteries	No fire, sparks, open flames or smoking. Wear acid-resistant gloves, clothing and glasses. Only pour battery acid into suitable and appropriately marked containers.	AS54.10-Z-0001-01A
	Notes on battery		AH54.10-P-0001-01A
1	Disconnect ground line from the on-board electrical system battery and ground line (1) from the starter battery (G1/4)		AR54.10-P-0003R
2	Remove ventilation grille (5) on air inlet	Unclip both catch hooks on the vent grille (5).	
3	Remove retaining bracket (4)		
4	Remove positive terminal cover (3)		
5	Slacken nut and disconnect positive line (2) from starter battery (G1/4)	Installation: Ensure that the positive line (2) is seated firmly, otherwise the positive terminal may be damaged.	
6	Remove starter battery (G1/4)	If the starter battery (G1/4) is replaced, the venting reservoir must be modified.	
7	Install in the reverse order		